




Instruction Manual

Alfa Laval Toftejorg™ MultiJet 40

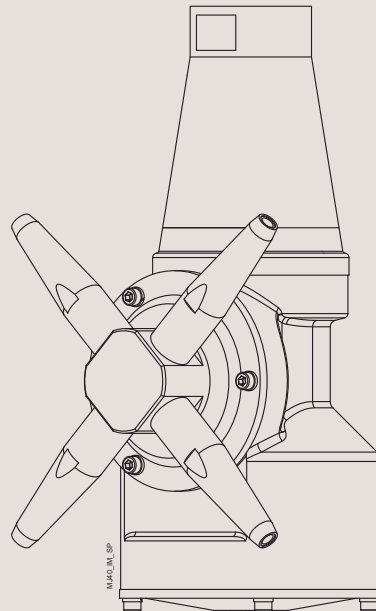

Covering:
Standard Machines
Machines delivered with ATEX Certification in accordance with Directive 2014/34/EU
TE91A170
First published: 2001

ESE02850-EN2 2018-10

Original manual

The information herein is correct at the time of issue but may be subject to change without prior notice

1. EC/EU Declaration of Conformity	5
2. Safety	6
2.1. Important information	6
2.2. Warning signs	6
3. Introduction	7
3.1. Introduction	7
3.2. Intended Use	7
3.3. Patents and Trademarks	7
3.4. ATEX Marking	8
3.5. Quality System	8
4. Installation	9
4.1. General Description	9
4.2. Functioning	9
4.3. General Safety and Installation Instructions	10
4.4. Special Conditions for Safe Use in Accordance with ATEX Certification	11
5. Operation	12
5.1. Normal Operation	12
6. Maintenance	13
6.1. Service and Repair of ATEX Certified Machines	13
6.2. Preventive Maintenance	14
6.3. Top Assembly	16
6.4. Bottom Assembly	18
6.5. Hub Subassembly	20
6.6. Stem Subassembly	22
6.7. Gear Subassembly	24
6.8. Replacement of Collar Bushes	26
6.9. Replacement of Ball Races	28
6.10. Replacement of Main Collars	30
7. Trouble Shooting Guide	32
8. Technical data	33
8.1. Alfa Laval MultiJet 40 Toftejorg with 2 nozzles	33
8.2. Alfa Laval MultiJet 40 Toftejorg with 4 nozzles	37
9. Product Programme	41
9.1. Standard Configurations	41
9.2. Available add-ons	41
10. Parts Lists and Drawings, Service Kits and Tools	42
10.1. Alfa Laval MultiJet 40 with 2 nozzles	42
10.2. Alfa Laval MultiJet 40 with 4 nozzles	44
10.3. Service kits and service intervals	46
10.4. Tools	47
11. General Information	48
11.1. Service and Repair	48
11.2. How to Order Spare Parts	48

Table of contents

The information herein is correct at the time of issue but may be subject to change without prior notice

11.3.How to contact Alfa Laval Kolding A/S	48
--	----

1 EC/EU Declaration of Conformity

The Designated Company

Alfa Laval Kolding A/S

Company Name

Albuen 31, DK-6000 Kolding, Denmark

Address

+45 79 32 22 00

Phone No.

hereby declare that

Tank Cleaning Machine

Designation

Alfa Laval Toftebjerg MultiJet 40

Type

From serial number 2016-0001 to 2030-99999

is in conformity with the following directive with amendments:

Machinery Directive 2006/42/EC

DS/EN ISO 12100:2011

The Pressure Directive 97/23/EC


According to its own volume and the rated pressure range, the product is regarded an Article 3, paragraph 3 Equipment

Equipment Explosive Atmospheres (ATEX) Directive 2014/34/EU

(Applicable for machine certified as category 1 and 2 component, see machine engraving)

DS/EN 13463-1:2009, DS/EN 13463-5:2011, DS/EN ISO/IEC 80079-34:2011, Annex A, paragraph A.5.3 Rotating machines

EC Type Examination Certificate no. Baseefa10ATEX0188X

Marking:  II 1 GD c T175°C Tamb 0°C to +140°C

Baseefa Ltd., Certification body number 1180, Rockhead Business Park
Staden Lane, Buxton, Derbyshire SK17 9RZ, United Kingdom

The person authorised to compile the technical file is the signer of this document

Global Product Quality Manager
Pumps, Valves, Fittings and Tank Equipment

Title

Lars Kruse Andersen

Name



Signature

Kolding

Place

2018-10-01

Date



2 Safety

*Unsafe practices and other important information are emphasized in this manual.
Warnings are emphasized by means of special signs.
Always read the manual before using the tank cleaning machine!*

2.1 Important information

WARNING

Indicates that special procedures must be followed to avoid serious personal injury.

CAUTION

Indicates that special procedures must be followed to avoid damage to the tank cleaning machine

NOTE

Indicates important information to simplify or clarify procedures.

2.2 Warning signs

General warning:



MJ40

3.1 Introduction

This manual has been prepared as a guide for installing, operating and maintaining your Alfa Laval Toftejorg tank cleaning machine. Should you require further assistance, our Technical Sales Support department and worldwide net of sales offices will be pleased to help you. Please quote the type, article and serial numbers with all of your enquiries; this helps us to help you. The type and serial number are placed on the gear house of the tank cleaning machine.

Important information: Before installing the machine and setting it into operation, carefully read the General Safety and Installation Instructions (page 10) and the special conditions for safe use in accordance with ATEX Certification Directive 2014/34/EU (page 11) and take all necessary precautions according to your application and local regulations.



NOTE

The illustrations and specifications contained in this manual were effective at the date of printing. However, as continuous improvements are our policy, we reserve the right to alter or modify any unit specification on any product without prior notice or any obligation.

The English version of the instruction manual is the original manual. We make reservations in regard to possible mistranslations in language versions of the instruction manual. In case of doubt, the English version of the instruction manual applies.

3.2 Intended Use

The end-user should verify:

- that the tank cleaning machine is in conformity with respect to tank, vessel or container size in which it is used.
 - that the construction materials (both metallic and non-metallic) are compatibility with product, flushing media, cleaning media, temperatures and pressure under the intended use.
-

3.3 Patents and Trademarks

This Instruction Manual is published by Alfa Laval without any warranty. Improvements and changes to this Instruction Manual may at any time be made by Alfa Laval without prior notice. Such changes will, however, be incorporated in new editions of this Instruction Manual.

Alfa Laval Kolding A/S. All rights reserved.

The Alfa Laval logotype is a trademark or a registered trademark of Alfa Laval Corporate AB. "Toftejorg" is a trademark or registered trademark of Alfa Laval. Other products or company names mentioned herein may be the trademarks of their respective owners. Any rights not expressly granted herein are reserved.

3 Introduction

MJ40

3.4 ATEX Marking

If ordered with ATEX certificate: ATEX Marking

The Alfa Laval Toftejorg MultiJet 40 is certified as category I components. The certification is carried out by the notified body Baseefa, who has issued the certificate number 10ATEX0188X. The marking on the ATEX certified Alfa Laval Toftejorg MultiJet 40 is as follows:

Rotary Jet Head MultiJet 40 s/n.: yyyy-xxxxx

Alfa Laval, DK-6000 Kolding, Albuen 31
 II 1GD c T175°C Tamb 0°C to +140°C
 1180 Baseefa 10ATEX0188X

Serial number explanation

Machines supplied with or without standard documentation:
yyyy-xxxxx: serial number
yyyy: year
xxxxx: 5 digit sequential number

Changes to the machine are not allowed without approval by the person responsible for the ATEX certification at Alfa Laval. If changes are made – or spare parts other than Alfa Laval original spare parts are used - the EC Type Examination certification (the ATEX Directive) is no longer valid.

Important ATEX information: Also see page 13 regarding special conditions for repair of ATEX certified machines.



3.5 Quality System

The Alfa Laval Toftejorg tank cleaning machines are produced according to Alfa Laval Kolding's ISO 9001 international Standard certified quality system.

MJ40


4.1 General Description

The Alfa Laval Toftejorg MultiJet 40 is a media driven and media lubricated tank cleaning machine. As it is self-lubricating, there are no lubricating substances such as oil grease etc. in the machine which need to be regularly changed.


4.2 Functioning

The flow of the cleaning fluid passes through a guide and a turbine, which accordingly is set into rotation. The turbine rotation is through a gearbox transformed into a combined horizontal rotation of the machine body and a vertical rotation of the nozzles.

The combined motion of the machine body and the nozzles ensures a fully indexed tank cleaning coverage. After $5 \frac{5}{8}$ revolutions of the Hub with nozzles ($5 \frac{3}{8}$ revolutions of the machine body) one coarse cleaning pattern is laid out on the tank surface. During the following rounds, this pattern is repeated 7 times, each of which is displaced $\frac{1}{8}$ of the mesh in the pattern. After a total of 45 revolutions of Hub with nozzles (43 revolutions of the machine body), a complete cleaning pattern has been laid out, and the first pattern is repeated.

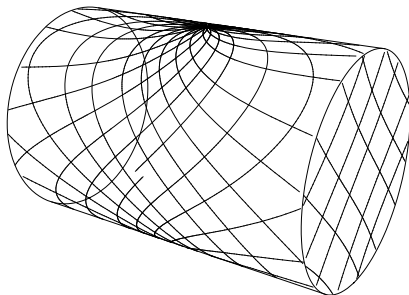

First cycle

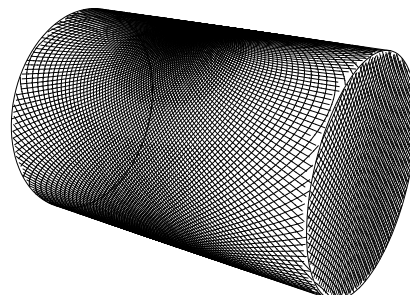

Full pattern

The speed of rotation of the turbine depends on the flow rate through the machine. The higher the flow rate the higher the speed of rotation will be. In order to control the RPM of the machine for a wide range of flow rates, the efficiency of the turbine can be changed (100% and 0% Turbine/Inlet guide).

Apart from the jet flow through the nozzles, fluid is leaking through the top of the machine, at the hub and through the bottom cover. The leakage between the moving parts at the top and at the hub are cleaning the gabs and thus preventing build-up of material that might cause the friction. The flow through the bottom cover is due to the fact that the machine is media lubricated and that accordingly a flow through the gearbox is needed.

4 Installation

MJ40

4.3 General Safety and Installation Instructions

The tank cleaning machine should be installed in a vertical position (upright or upside down). It is recommended to install a filter with a mesh size of max. 3 mm in the supply line in order to avoid large particles to clog inside the machine. Before connecting the machine into the system, all supply lines and valves should be flushed to remove foreign matter.

For devices with tapered thread connections to the down pipe, it is recommended that you secure the connection in a manner appropriate for the application. Subject to the intended use environment and any inhouse user requirements or policies, an adhesive such as Loctite number 243 or equivalent could be used. Other methods could be acceptable and subject to customer preference.

Note: The machine shall be installed in accordance with national regulations for safety and other relevant regulations and standards. Precautions shall be made to prevent starting of the cleaning operation, while personnel are inside the tank or otherwise can be hit by jets from the nozzles. In EU-countries the complete system must fulfil the EU-machine Directive and depending of application, the EU-Pressure Equipment Directive, the EU-ATEX Directive and other relevant Directives and shall be CE-marked before it is set into operation.

ATEX If the machine is used in potential explosive atmospheres, tapes or joint sealing compounds which are electrical
Warning: insulators must not be used on threads or joints, unless an electrical connection is otherwise established to ensure an effective earthing. In addition, connecting pipe work, must be electrically conductive and earthed to the tank structure. The resistance between the nozzles and the tank structure should not exceed 20,000 Ohm. This is essential to avoid the build-up of static electricity on the machine. For further information see IEC/TS 60079-32-1:2013 Safety of Machinery, guidance and recommendations for the avoidance of hazards due to static electricity.



The machine as delivered has been tested at the factory before shipping. For transportation reasons, the nozzles have been removed prior to shipment. Before installation and use, the nozzles should be attached and secured appropriately for the application intended.

Check that the machine is in operating condition by inserting hex Screwdriver (tool number TE134A) in screw in top of Turbine shaft and easily turn Turbine shaft clockwise. If any resistance is recognised, the machine should be disassembled to localise the cause.

MJ40

4.4 Special Conditions for Safe Use in Accordance with ATEX Certification

Directive 2014/34/EU

ATEX Warning: The unit may be operated, in a hazardous area, only when filled with the process fluid.



ATEX Warning: The maximum permitted process fluid temperature is 95°C, with an ambient temperature range of 0°C to 140°C.



ATEX Warning: The maximum permitted process fluid pressure is 12 bar.



ATEX Warning: The unit must **not** be operated in a vessel having an enclosed volume of greater than 100m³.



Tanks larger than 100 m³:

To use Tank Cleaning Machines in tanks larger than 100m³ is possible under certain conditions.

It is necessary to know the current factors such as tank size, cleaning solvent and product.

Additives can be used in the cleaning solvent, or, for example, the tank can be filled with nitrogen. The basic rules are described in the guide "IEC/TS 60079-32-1:2013".

Following a guidance document such as "IEC/TS 60079-32-1:2013" to establish safe use of machinery and process is the users own responsibility and is not covered by the ATEX certification for this product.

ATEX Warning: The unit must be effectively earthed at all times when in use.



ATEX Warning: The user must address the electrostatic hazards generated from the process of the equipment in accordance with guidance document IEC/TS 60079-32-1.



In addition to the above mentioned precautions relating to the ATEX guidelines Directive 2014/34/EU, the Safety Precautions on page 10 must be observed.

5 Operation

MJ40

5.1 Normal Operation

Cleaning Media

Use only cleaning media compatible with stainless steel AISI 316/316L, Tefzel 200, Viton, Teflon TFM, ACO212CF and PEEK. Please note that PEEK is not resistant to concentrated sulfuric acid. Please note that Viton is not resistant to a number of organic solvents as esters, ethers and ketones. Normal detergents, moderate solutions of acids and alkalis will be acceptable. Aggressive chemicals, excessive concentrations of chemicals at elevated temperatures as well as hydrochlorides should be avoided. If you are in doubt, contact your local Alfa Laval sales office.

After Use Cleaning

After use flush the machine with fresh water. Cleaning solutions should never be allowed to dry or set-up in the system due to possible "salting out" or "scaling" of the cleaning ingredient. If cleaning media contains volatile chloride solvents, it is recommended not to flush with water after use, in case this can create hydrochloric acid.

Pressure

Avoid hydraulic shocks. Put on pressure gradually. Do not exceed 12 bar inlet pressure. Recommended inlet pressure appears from Technical Data (page 33). High pressure in combination with high flow rate will increase consumption of wear parts.

ATEX Warning: Steam Cleaning pressure:



If steam cleaning is done through the machine, the steam pressure must not cause the machine to rotate.

ATEX Warning: Draining:



If the machine is drained using compressed air, then the compressed air pressure must not cause the machine to rotate.

Temperature:

ATEX Warning: Steam Cleaning:



Tanks with capacities greater than 100 m³ that could contain a flammable atmosphere should not be steam cleaned, as steam issuing from a nozzle could contain charged droplets.

Tanks smaller than this may be steam cleaned providing that: the steam nozzles and other metal parts of the system are reliably earthed and grounded to the tank structure.

ATEX Warning: Atmosphere/surface temperature:



In potentially explosive atmospheres, the temperature must not exceed the maximum surface temperature according to the temperature class for the combustible gas or liquid.

MJ40

6.1 Service and Repair of ATEX Certified Machines

All service and repair of ATEX certified machines can be performed by Alfa Laval Kolding A/S, Denmark or by an Alfa Laval service center approved by Alfa Laval Kolding A/S.

**ATEX
Warning:**



In order to ensure compliance with the ATEX regulations and keep the machine ATEX certification valid the service or repair must be performed by an authorized person with knowledge of the ATEX requirements and regulations.

All spare parts must be original Alfa Laval spare parts and the repair or service must be done according to the instructions in the related manual.

If a customer wishes to carry out service or repair himself, it is the responsibility of the repair shop to ensure that the ATEX requirements are met in any way possible. After performing service or repair, the repair shop thus carries the full responsibility for traceability of all relevant documents in order to ensuring the retention of the ATEX certification of the machine.

6 Maintenance

MJ40

6.2 Preventive Maintenance

In order to keep your tank cleaning machine servicing you as an efficient tool in your tank cleaning operations, it is essential to maintain its high performance by following a simple preventive maintenance programme, which will always keep your tank cleaning machine in good condition.

Good maintenance is careful and regular attention!

The following recommended preventive maintenance is based on tank cleaning machines working in average conditions. However, you will appreciate that a tank cleaning machine, which has a rough and dirty job to do, will need more frequent attention than one working in ideal conditions. We trust that you will adjust your maintenance programme to suit.

Always use only proper tools. Use standard tool kit. Never force, hammer or pry components together or apart. Always perform all assembly/disassembly steps in the order described in this manual. Never assemble components without previous cleaning. This is especially important at all mating surfaces. Work in a clear well lighted work area.

NOTE

Recommended tightening torque for all screws: 4-5 Nm.

MJ40

Every 300 working hours

1. Disassemble machine as described on the following pages.
2. Clean material build-up and deposits from internal parts with Scotch-brite, S-Ultrafine, eventually chemical cleaner and fine abrasive cloth.
3. Check Slide bearings (28 on the Cross Sectional Drawing, page 42) for wear. If hole is worn oval to max. diameter more than 10.4 mm, Slide bearing should be replaced. If end face of Slide bearing is worn more than x mm into Slide bearing, it should be replaced.

Under Turbine shaft:	x = 1.5 mm
At Horizontal shaft:	x = 0.5 mm

4. Check Collar bushes (10) in Gear frame. If holes are worn oval to max. diameter more than 13.4 mm, Collar bush should be replaced. How to replace Collar bushes, see page 26.

NOTE

Timely replacement of Slide bearings and Collar bushes will prevent costly damage to the gear box.

5. Check Worm wheels (11 and 33). If extremely worn, they should be replaced.
6. Check Main bush (5). If worn it should be replaced.
7. Assemble machines as described in the following pages.
8. Check that the machine is in operating condition by inserting hex Screwdriver (tool number TE134A) in screw in top of Turbine shaft and easily turn Turbine shaft clockwise. If any resistance is recognized, the machine should be disassembled to localize the cause.

Apart from the parts specifically mentioned above, all the remaining wear parts should regularly be inspected for wear. Which parts that are wear parts appear from the Spare Part Manual for Alfa Laval Toftejorg MultiJet 40, EPS00158, available from the on-line Alfa Laval product catalogue Anytime or the Close at hand spare part catalogue.

6 Maintenance

MJ40

6.3 Top Assembly

Disassembly


1. Remove Screws (17). Loosen and unscrew with a socket wrench (tool number TE462A).
2. Lift off Top Cone (1).
3. Remove Guide/Guide ring (2). The Guide has a groove in the outer diameter. The Guide is easily lifted out of the Stem by means of two ordinary Screwdrivers inserted into the groove.
4. Remove Screw (15), Spring washer (16) and Washer (13). To secure Impeller against rotation, insert carefully Screwdriver (tool number TE134A), through Impeller (4) into a hole in the Stem.
5. Pull off Impeller (4).

Reassembly

1. Reinstall Impeller (4). Make sure that Impeller is correctly rotated to be pushed onto Turbine shaft. Do not try to hammer Impeller in position, as this will damage Slide bearing under Turbine shaft.
2. Mount Washer (13), Spring washer (16) and 3/16" Screw (15) and tighten. To secure Impeller against rotation insert carefully Screwdriver (tool No. TE134A) through Impeller (4) into a hole in the Stem.
3. Reinstall Guide/Guide ring (2).
4. Mount Top Cone (1). Make sure that it is in correct position over Guide/Guide ring (2). Rotate Top cone to align holes in Top cone and Stem.
5. Mount and tighten Screws (17) with a socket wrench (tool number TE462A).

MJ40

Top Assembly

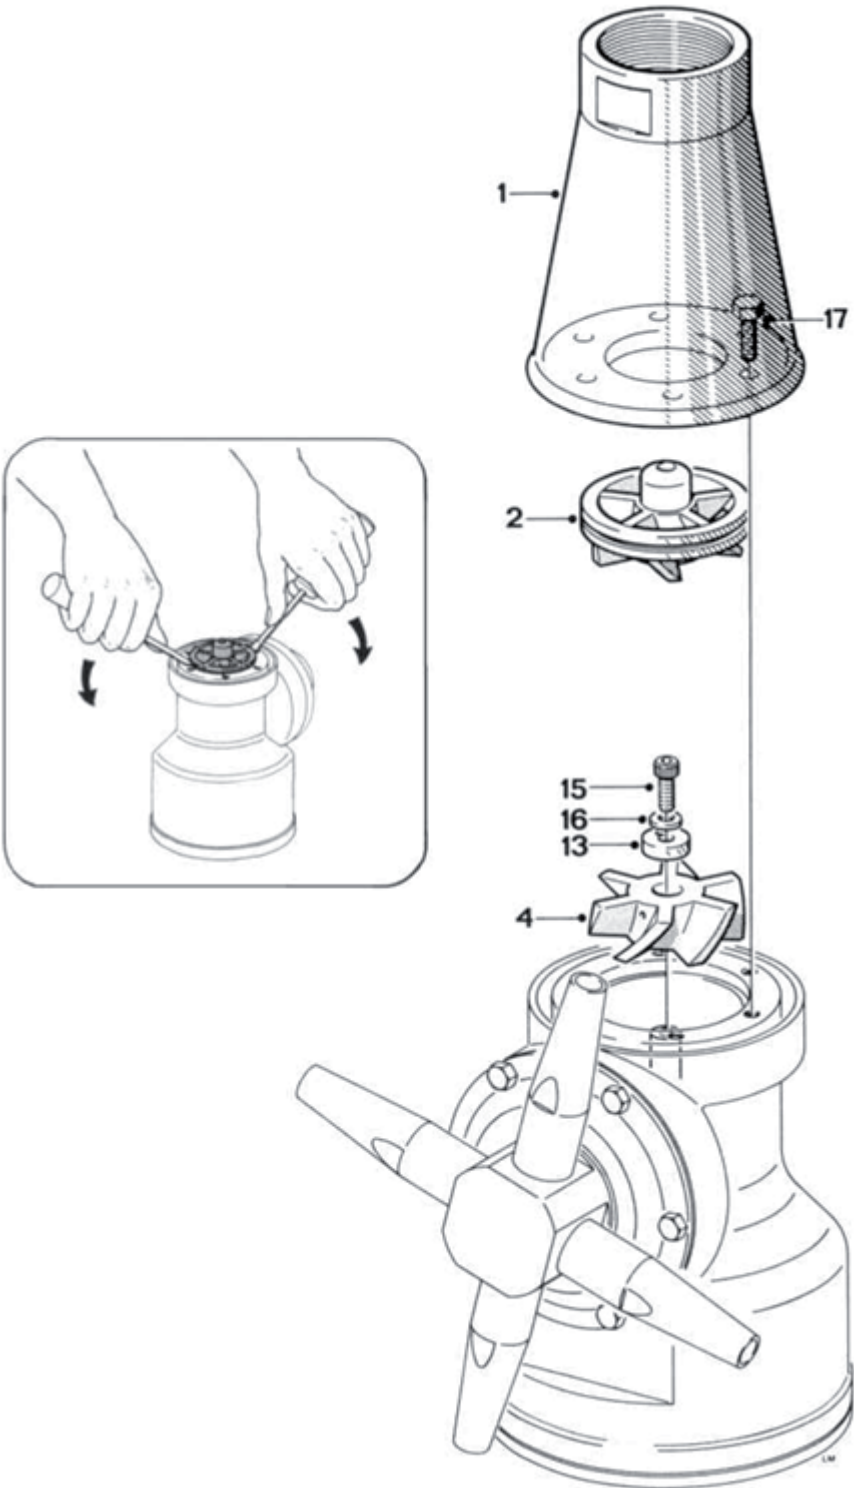

TD523406

Depicted with 4 nozzles

6 Maintenance

MJ40

6.4 Bottom Assembly

Disassembly

1. Turn machine upside down.
2. Remove Screws (15) and Spring Washers (16) from Bottom cover (30).
3. Remove Bottom cover (30).
4. Remove Screws (15) in Bearing cover (14). Carefully push out Turbine shaft (6) from opposite end. Do not try to hammer out Turbine shaft, since this can damage Slide bearing and o-ring.
5. Remove Screws (15) and Spring Washers (16) along the circumference of Gear frame (29). Turn Gear frame about 1 cm (1/2"). Draw out Gear Subassembly (holes in Gear frame are excellent for holding Gear Subassembly).

Reassembly

1. Reinsert Gear subassembly in bottom of machine body. Turn Gear Frame (29) to align holes in Gear frame and 3/16" threads in body. Mount Spring washers (16) and Screws (15) along circumference of Gear frame (29). Tighten screw crosswise.


Note:

To secure meshing between Gear wheel (7) and Pinion (9). It might be necessary to rotate slightly either the whole Gear Subassembly or the Gear wheel.

2. Reinsert Turbine shaft (6) with Slide bearing carefully through Gear wheel (7). Push carefully Slide bearing (28) into position. Mount Bearing cover (14) with Screws (15). Tighten crosswise.
3. Place Bottom cover (30).
4. Mount Spring Washers (16) and Screws (15) and tighten crosswise.

MJ40

Bottom Assembly

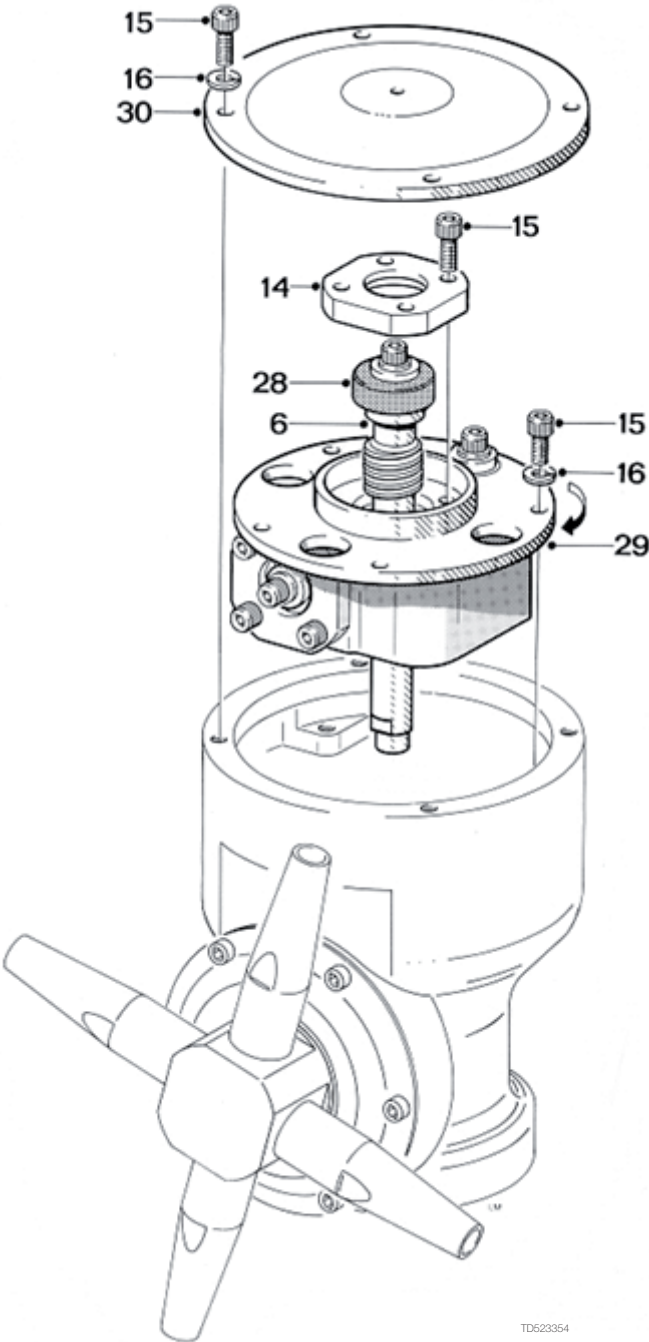

TD523354

Depicted with 4 nozzles

6 Maintenance

MJ40

6.5 Hub Subassembly

Disassembly

1. Remove Nozzles (20). Nozzles are untightened with a wrench on the faces of the Nozzles.
2. Remove Screws (15) and Hub cover (19).
3. Draw out Hub (21) together with Ball retainer with balls (24) and Bevel gear (18).
4. Check Lip seal (22). If it is worn it should be replaced.


If Ball races (18.1 and 19.1) in Hub cover and in Bevel gear are extremely worn, they should be replaced as well as the Ball retainer with balls (24). How to replace Ball races see page 28).

Reassembly

1. Mount Lip seal (22).
2. Slide on Hub (21). Reinsert Bevel gear with race (18) and Ball retainer with balls (24).
3. Mount Hub cover with race (19), and set with Spring Washers (16) and Screws (15).
4. Screw on Nozzles (20) and tighten with wrench.

MJ40

Hub Subassembly

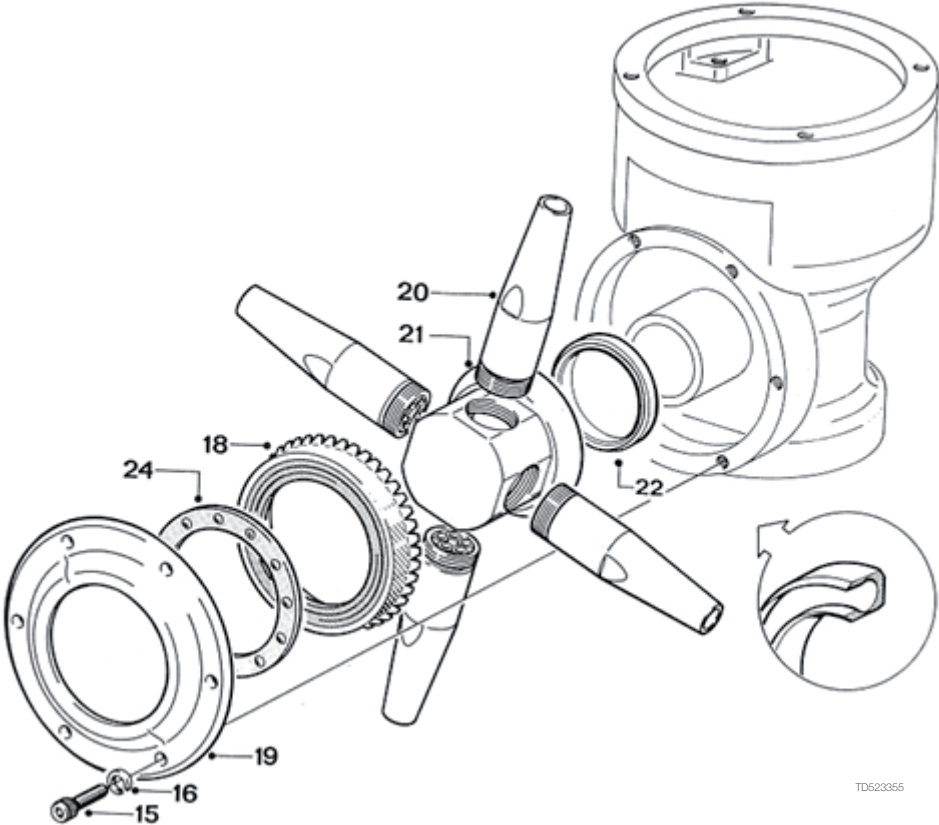

TD523955

Depicted with 4 nozzles

6 Maintenance

MJ40

6.6 Stem Subassembly

Disassembly

1. Place machine in upside-down position.
2. Remove Screws (15) in Gear wheel (7). To prevent rotation of Stem (3) mount two screws in two holes opposite one another in BIG end of Stem. Place Stem in a vice held by the heads of the two screws.
3. Draw out Gear wheel with ball races (7) and Ball retainer with balls (24).
4. Push out Stem (3).
5. If worn, press out Main bush (5).


If Ball races in Body (26.3) and on Gearwheel (7.1) are extremely worn they should be replaced together with Ball retainer with balls (24). How to replace Ball races see page 28.

Reassembly

1. If replaced, press Main bush (5) into Stem (3).
2. Push carefully Stem into Body. Turn machine upside-down.
3. Place Ball retainer with balls (24) and Gear wheel (7) into Body on Ball race. Rotate Gearwheel to check free rotation. Mount Gearwheel with Screws (15) and tighten crosswise. To prevent rotation of Stem (3) mount two screws in two holes opposite one another in BIG end of Stem. Place Stem in a vice held by the heads of the two screws.

MJ40

Stem Subassembly

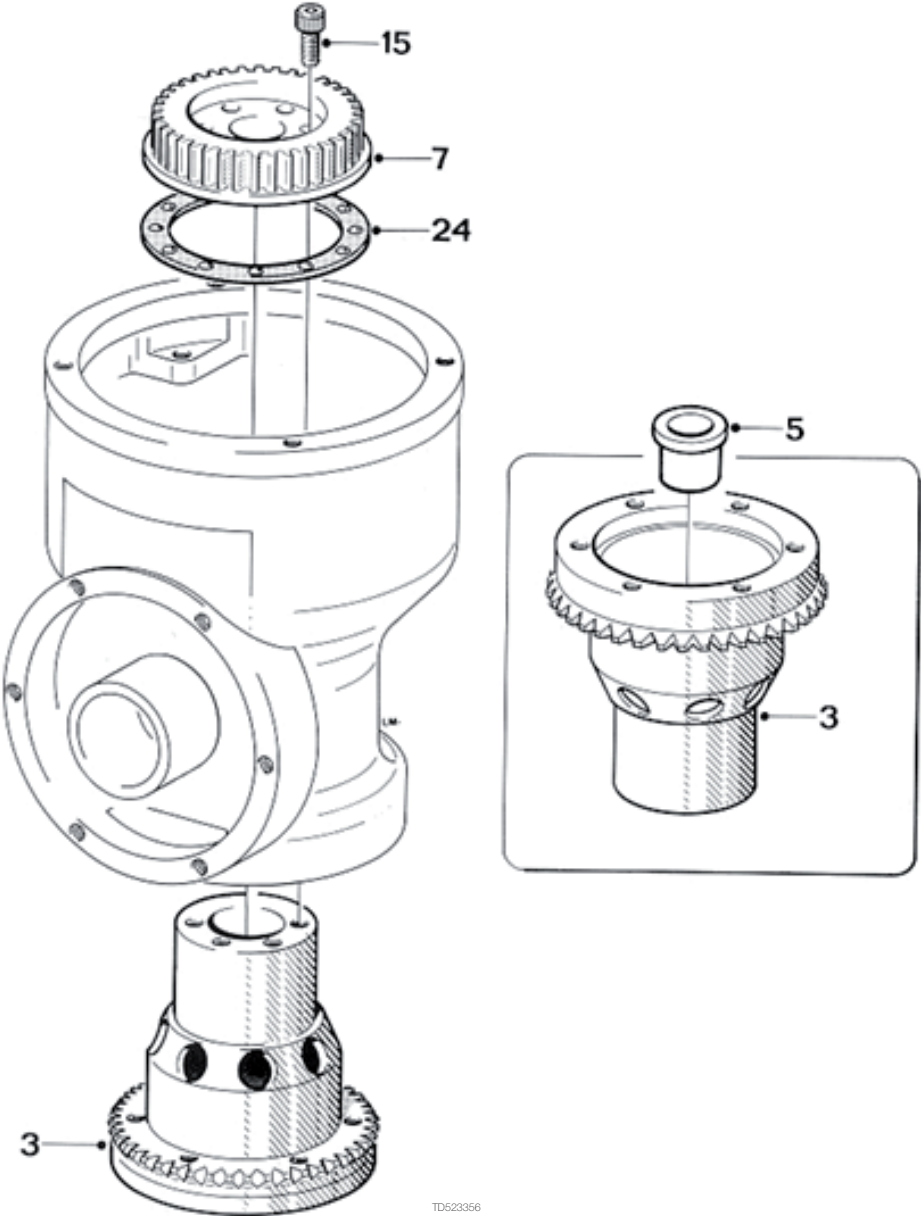

TD523356

6 Maintenance

MJ40

6.7 Gear Subassembly

Disassembly

1. To make a backstop, remount Turbine shaft (6) with Slide bearing (28) into Gear frame (29). Mount Bearing cover (14) with Screws (15).
2. Hold Turbine shaft (6) against 1st stage Worm wheel (33) with one hand and loosen Screws (15) in Pinion (9) and Horizontal shaft (27) with the other hand.
3. Remove Screws (15) in Bearing cover (14) and take out Turbine shaft (6).
4. Draw out Horizontal shaft (27) and 1st stage Worm wheel (33) after removal Screw (15), Spring washer (16) and Washer (13).
5. Draw out Pinion (9) and 2nd stage Worm wheel (11), also freeing Journal (12) after removal of Screw (15), Spring washer (16) and Washer (13).
6. Remove Bearing cover (14) and Slide bearing (28) after removal of Screw (15).
7. Remove Screw (15), Spring washer (16), Washer (13) and Slide bearing (28) from Turbine shaft (6). Use faces on Turbine shaft to hold against rotation.

Warning:



Do not damage driver faces on Turbine shaft. Use only proper tools providing a firm grip such as a wrench or a vice.

How to replace Collar bushes (10), see page 26.

Reassembly

1. Mount Slide bearing (28) carefully on Turbine shaft (6) and secure with Washer (13), Spring washer (16) and Screw (15). Hold Turbine shaft in a vice or with wrench on driver faces and tighten.
2. Push Slide bearing (28) for Horizontal shaft (27) into Gear frame (29) and fix Bearing cover (14) with Screws (15). Tighten crosswise.
3. Insert 2nd stage Worm wheel (11), Pinion (9) and Journal (12). Mount Washer (13), Spring washer (16) and fix with Screw (15). Check rotation.


Note:

It is important that the Screw holding the Pinion is fastened to a torque moment of 5 Nm, to secure it from loosening.

4. Insert 1st stage Worm wheel (33) and Horizontal shaft (27). Mount Washer (13), Spring washer (16) and fix with Screw (15). Check rotation.
5. Reinstall Turbine shaft (6) against 1st stage Worm wheel and tighten Screws (15) in Horizontal shaft (27) and Pinion (9).
6. Hold Turbine shaft (6) against 1st stage Worm wheel and tighten Screws (15) in Horizontal shaft (27) and Pinion (9).
7. Remove Turbine shaft (6) and Slide bearing (28) before Gear subassembly is inserted in machine body.

MJ40

Gear Subassembly

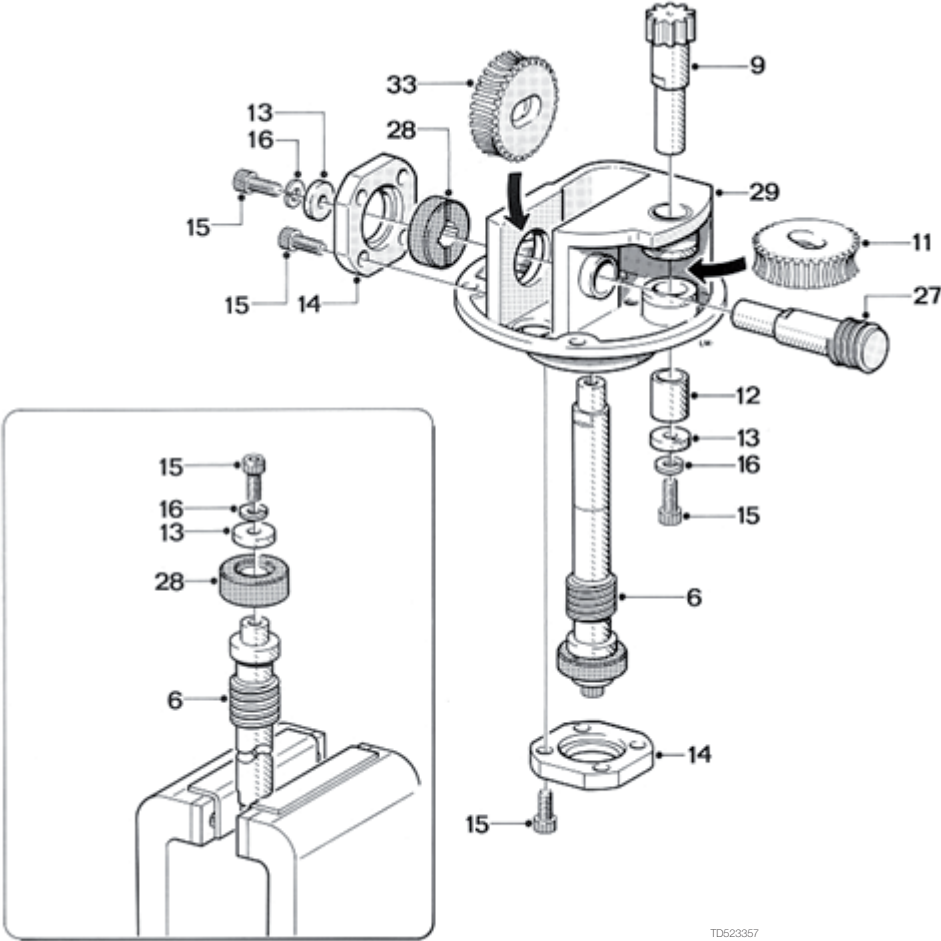

TD523357

6 Maintenance

MJ40

6.8 Replacement of Collar Bushes

Replacement of Collar Bushes

1. Place Gear frame (29) upside down with a firm support under the flange. Use for instance jaws of a vice. Do not clamp on machined surfaces. With Pusher (tool number TE81B033, see page 47) knock out Collar bush.
2. Turn Gear frame to upright position and hold over support such as flat steel bar clamped in a vice. Knock out Collar bush with Pusher.
3. Turn Gear frame 90° and hold over support. Knock out collar bush with Pusher.

Warning:




To avoid risk of deforming Gear frame, it is utmost important that it is supported while the Collar bushes are being knocked out.

4. Clean holes and push in new Collar bushes into Gear frame.

MJ40

Replacement of Collar bushes

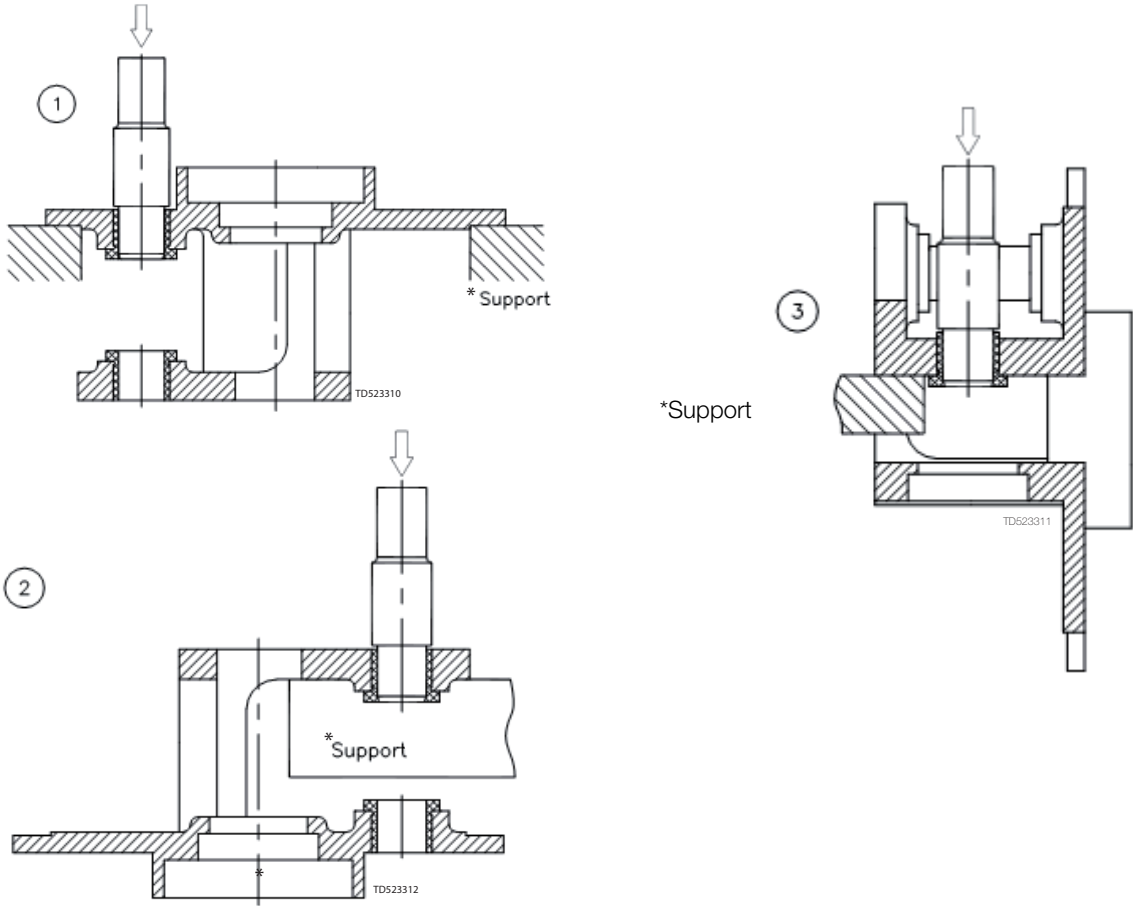

* Support

6 Maintenance

MJ40

6.9 Replacement of Ball Races

In body

1.
 - A. With big end downwards knock several times Body with bearings (26) hard against firm wooden support until Ball race (26.3) drops out.
 - B. If it is not possible to knock out Ball race in this way, it is necessary first to screw out Main collar lower (26.2) – see page 30. Carefully push off old Ball race without damaging Main collar lower. Use mandrel and firm support. Before mounting of new Ball race, Main collar lower (26.2) must be remounted into Body – see page 30.
2. Clean surfaces and place Ball race (26.3) on Main collar lower (26.2). Press by hand as long as possible. By means of a tube mandrel or if desired wooden block, carefully hammer Ball races home.

Ball races must not project over end face of Main collar lower. To avoid tilting mandrel must push along the whole circumference of Ball race. Do not damage surface of Ball race.

On Gear wheel




1. Place Gear wheel with ball race (7) on support. Support only under Ball race (7.1). With mandrel press off old Ball race.
2. Clean surfaces and press on new Ball race. Ball race must be pressed fully home on Gear. Press parallel. Use press or vice. Do not damage surface of Ball race.

In Hub cover

1. Place Hub cover with ball race (19) on support. Carefully knock out old Ball race by means of small mandrel or if desired screwdriver. Knock several times around the circumference to avoid tilting.
2. Clean surfaces and press in new Ball race. Ball race must be pressed fully home. Press parallel. Do not damage surface of Ball race.

MJ40

Replacement of Ball races

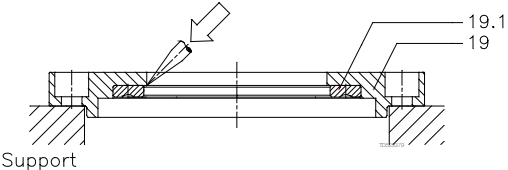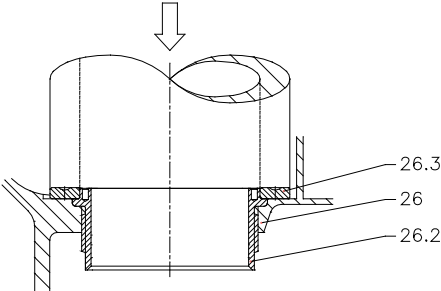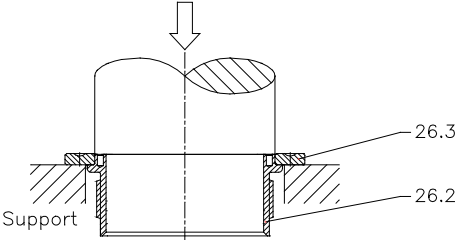

6 Maintenance

MJ40

6.10 Replacement of Main Collars

Although normally exposed to very limited wear, it is possible to replace Main collars (26.1 and 26.2) in Body. The procedure to do this is described below.

Main collar upper

1. Place Body (26) in a vice upright position. Do not clamp on machined faces. Insert tool (see page 47) into Main collar upper (26.1). Unscrew Main collar.
2. Carefully clean thread and recess in Body. Do not damage special thread in Body. Recess must be absolutely clean. Make sure that new Main collar is clean and free from impurities.
3. Remove O-ring (34) from old Upper main collar and place it in the new one. (Inspect O-ring, if worn it should also be replaced).
4. Screw in new Main collar. Attention should be given to make sure that thread is in correct engagement before screwing in Main collar.
5. Tighten Main collar fully home and tighten up.
6. Check that Main collar is fully home: install Stem, Ball retainer with balls and Gear wheel (see page 22). Check that there is sufficient axial clearance to allow for free rotation of Stem.

Main collar lower

1. Place Body in a vice in upside down position. Do not clamp on machined faces. Insert tool (see page 42) into Main collar lower (26.2). Unscrew Main collar.



Warning: Thread on Main collar lower is left-handed.



2. Carefully clean thread and recess in Body. Do not damage special thread in Body. Recess must be absolutely clean.
3. Make sure that new Main collar is clean and free from impurities.
4. Inspect O-ring on stem (36), if worn it should be replaced.
5. Screw in new Main collar. Attention should be given to make sure that thread is in correct engagement before screwing in Main collar.
6. Tighten Main collar fully home and tighten up.
7. Check that Main collar is fully home: install Stem, Ball retainer with balls and Gear wheel. Check that there is sufficient axial clearance to allow for free rotation of Stem.

MJ40

Replacement of Main Collars

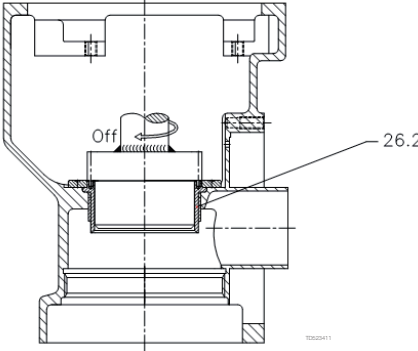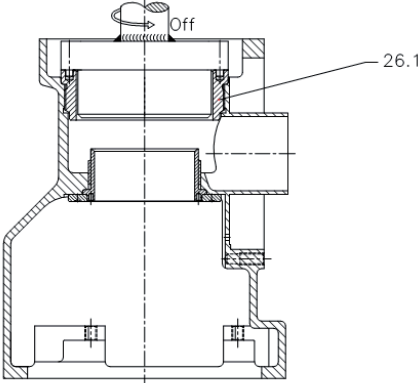

7 Trouble Shooting Guide

MJ40

Slow rotation or failure of machine to rotate


Possible Causes	Fault finding
No or insufficient liquid flow	<p>a). Check if supply valve is fully open b). Check if inlet pressure to machine is correct c). Check supply line and filter for restriction/clogging d). Remove Nozzles and check for clogging. If blocked, carefully clean Nozzle without damaging stream straighteners and Nozzle tip. e). Remove Top cone, Guide and Impeller (see page 16) and check for clogging in Impeller area. If large particles repeatedly get jammed in the machine, install filter or reduce mesh size of installed filter in supply line.</p>
Foreign material or material build-up	<p>Insert hex Screwdriver in Screw in top of Turbine shaft and easily turn Turbine shaft clockwise. If any resistance is recognised, disassemble machine in order to localise the cause.</p>
a). Impeller jammed	Remove Guide and Impeller (see page 16) and remove foreign material.
b). Turbine shaft - sluggish in Main bush	Remove Turbine shaft (see page 18) and clean Main bush.
c). Bevel gears jammed	Remove Top cone and Hub Assembly (see page 20). Clean teeth on Stem and Bevel gear.
d). Stem jammed/sluggish	Remove Gear Assembly (see page 18). Check free rotation of Stem. Remove Stem (see page 22). Remove foreign material/material build-up on Stem and inside Main collars. Clean Ball races and Ball retainer with balls. Also clean main bush.
e). Gearbox jammed/sluggish	Remove foreign material from Gearbox. Check rotation of shafts. If restriction is recognized, disassemble gearbox (see page 24) and remove material build up, especially on 2. Stage Worm wheel and mating Collar bushes.
f). Hub jammed/sluggish	Disassemble Hub Assembly (see page 20). Remove foreign material inside Hub. Clean Ball races and Ball retainer with balls. Also clean nose of Body.
Wear	
a) Slide bearings	See page 14.
b) Main bush	See page 14.
c) Worm wheels	See page 14.
d) Collar bushes	See page 14.
e) Turbine shaft	Check clearance in Main bush and in Slide bearing. Transverse movement should not exceed 0.5 mm. Also inspect Worm wheel for wear.
f) Horizontal shaft	Check clearance in Collar bushes. Transverse movement should not exceed 0.5 mm. Also inspect worm for wear.
Mechanical defects	
a). Worm wheels. Teeth broken	Replace Worm wheel.
b). Worm wheel can rotate on Horizontal shaft/Pinion due to damaged driver faces.	Replace Worm wheel.
c). Damaged teeth on gear	Inspect teeth on Stem and Hub for deformation. Mount Hub and Stem in Body (see page 20 and 22). Hold Body in upside down position and rotate Hub to check that Bevel gears can work together. If damaged: Replace Stem and/or Bevel gear.

MJ40

8.1 Alfa Laval MultiJet 40 Toftejorg with 2 nozzles

Weight of machine:	6.5 kg (14.3 lb)
Working pressure:	2-12 bar (30-175 psi)
Recommended inlet pressure:	5-10 bar (75-150 psi)
Working temperature max.:	95°C (200°F)
Ambient temperature:	0 - 140°C (95°C - 140 °C when not operated)
Materials:	Stainless steel AISI 316 and 316L, Tefzel 200, PEEK, Viton, ACO212CF, Teflon TFM


Principal dimensions in mm

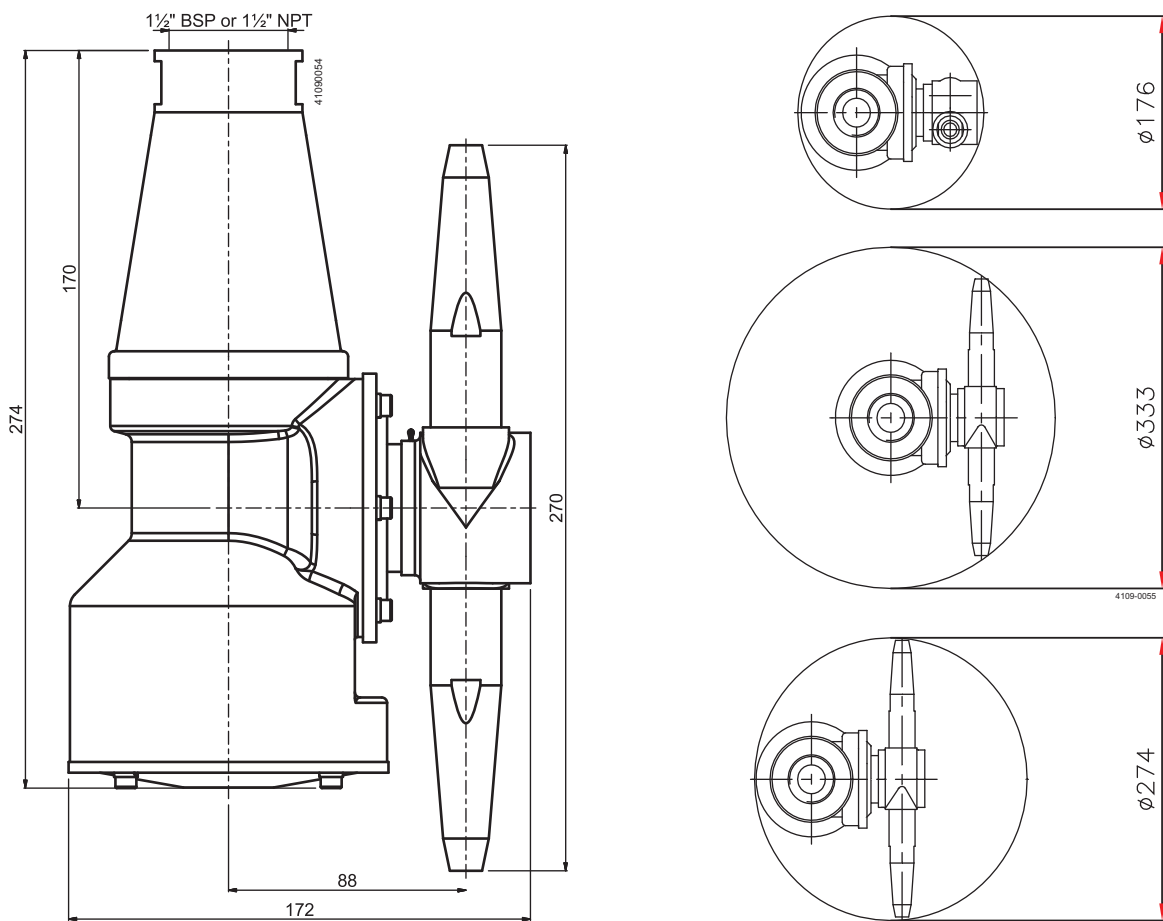

8 Technical data

MJ40


Flow rate)

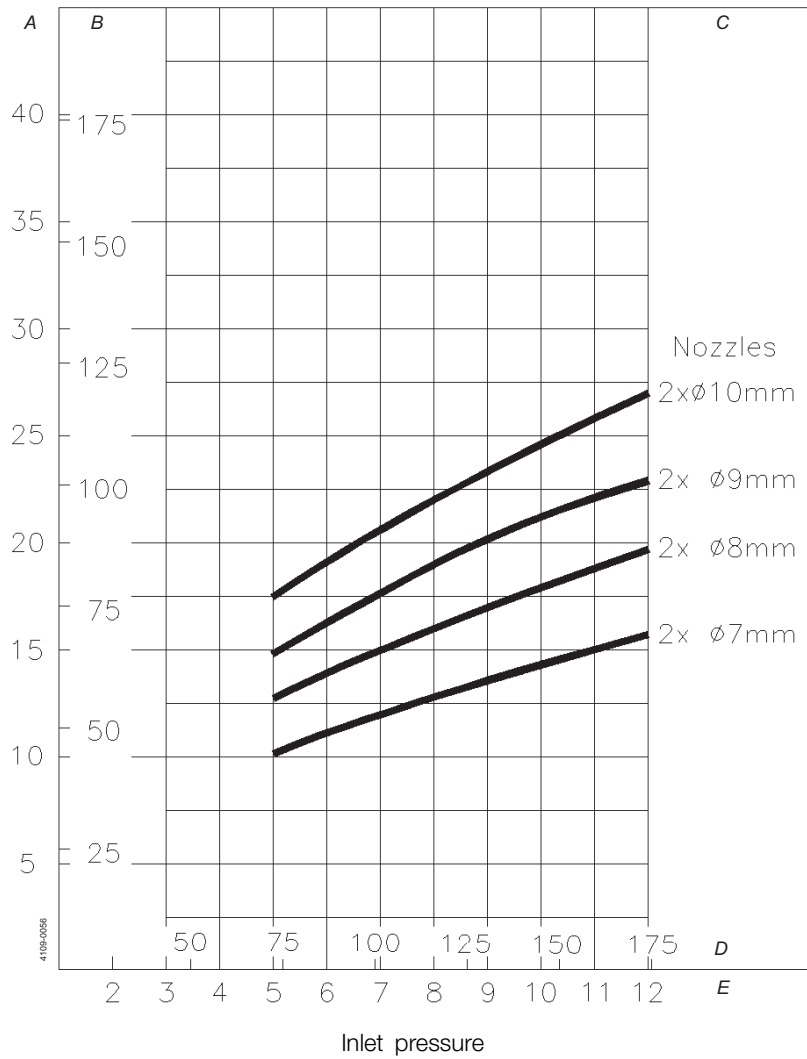

A: m ³ /h	B: USgpm	C: nozzle sizes	D: psi	E: bar
----------------------	----------	-----------------	--------	--------

MJ40

Throw length

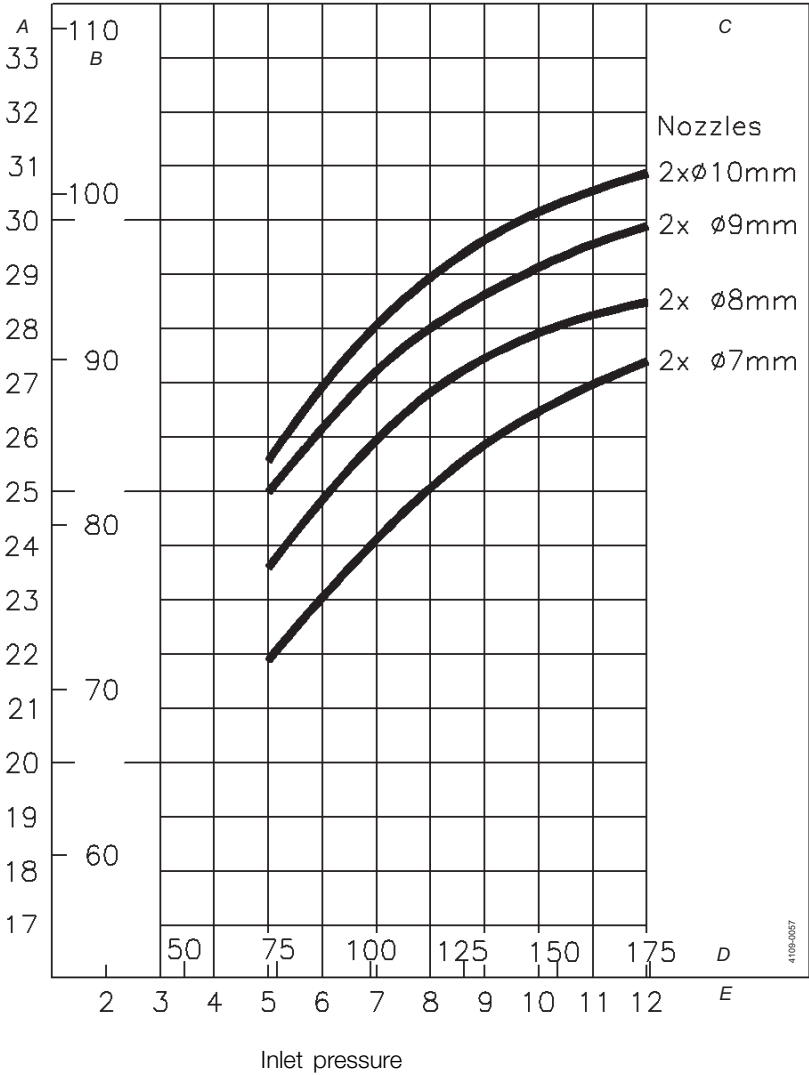


A: m	B: ft	C: nozzle sizes	D: psi	E: bar	A1: Max. static	B1: Effective
------	-------	-----------------	--------	--------	-----------------	---------------

8 Technical data

MJ40

Cleaning Time, f. complete Pattern (=8 cycles)

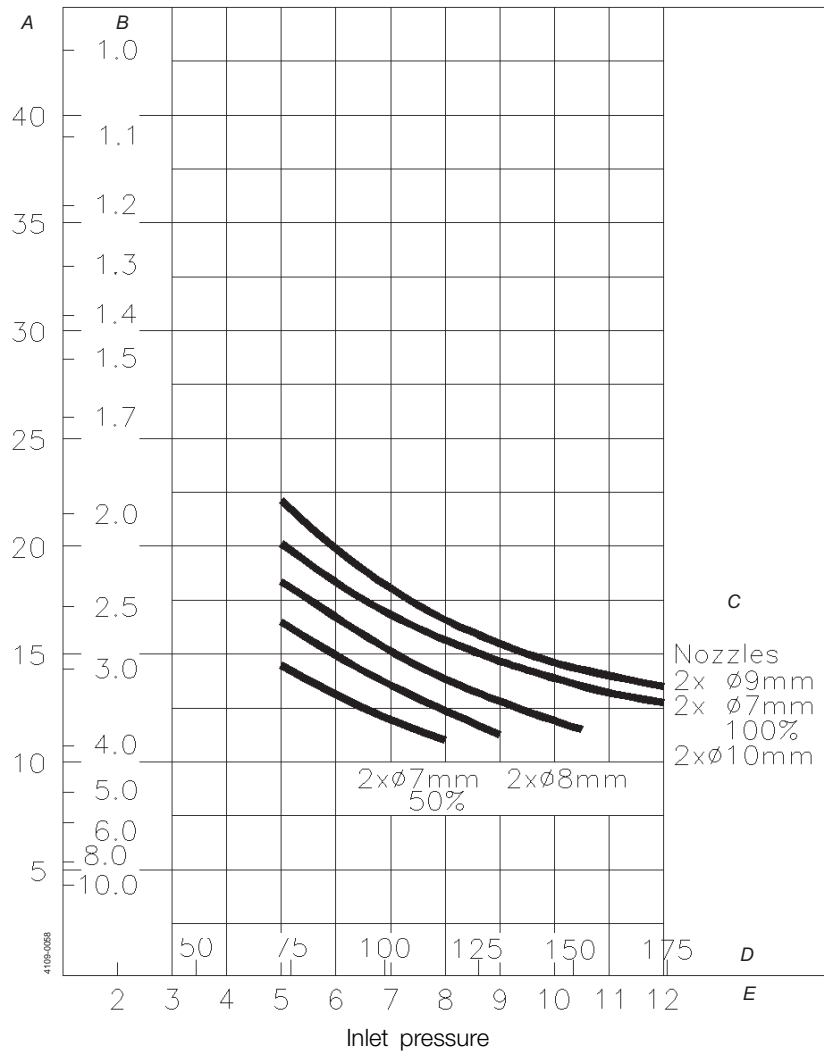


A: min.	B: RPM of machine body	C: nozzle sizes	D: psi	E: bar
---------	------------------------	-----------------	--------	--------

MJ40

8.2 Alfa Laval MultiJet 40 Toftejorg with 4 nozzles

Weight of machine:	6.1 kg (13.6 lb)
Working pressure:	3-12 bar (45-175 psi)
Recommended inlet pressure:	3-8 bar (45-120 psi)
Working temperature max.:	95°C (200°F)
Ambient temperature:	0 - 140°C (95°C - 140 °C when not operated)
Materials:	Stainless steel AISI 316 and 316L, Tefzel 200, PEEK, Viton, ACO212CF, Teflon TFM


Principal dimensions in mm

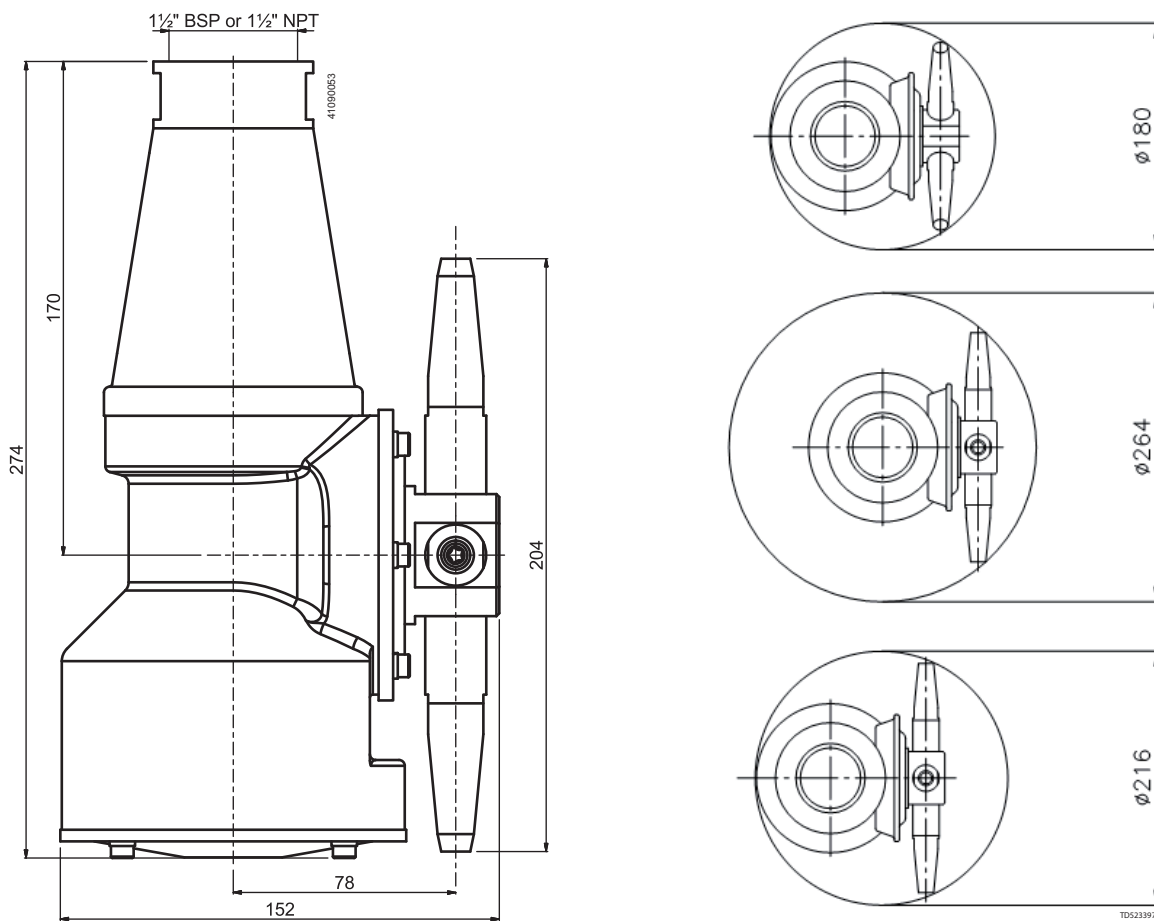

8 Technical data

MJ40

Flow rate)

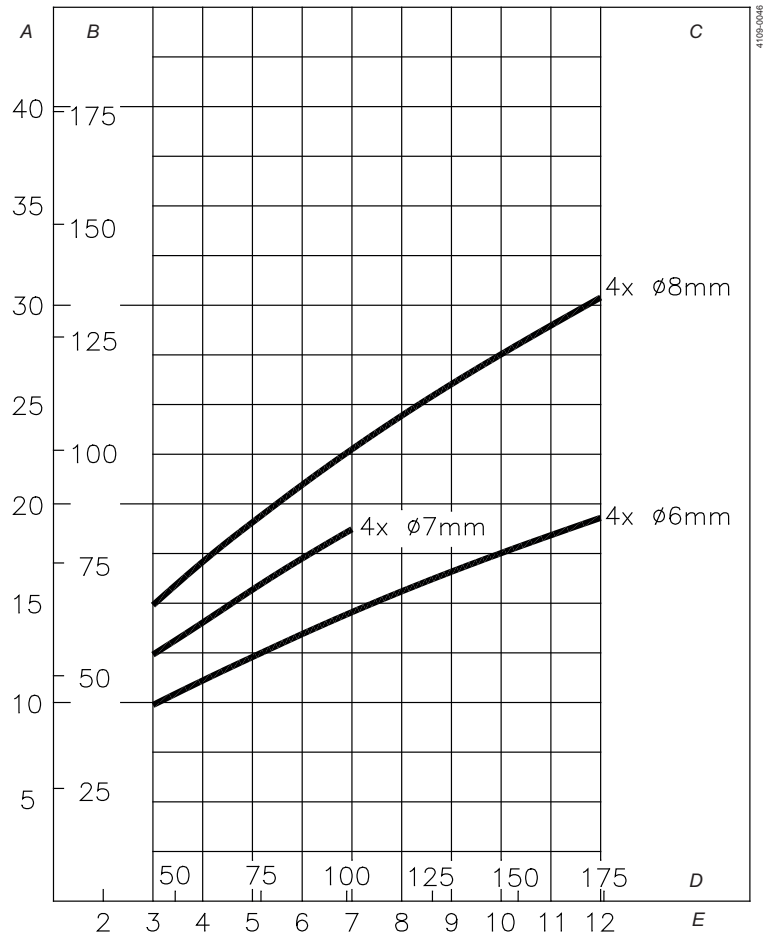


Inlet pressure

A: m ³ /h	B: USgpm	C: nozzle sizes	D: psi	E: bar
----------------------	----------	-----------------	--------	--------

MJ40

Throw length

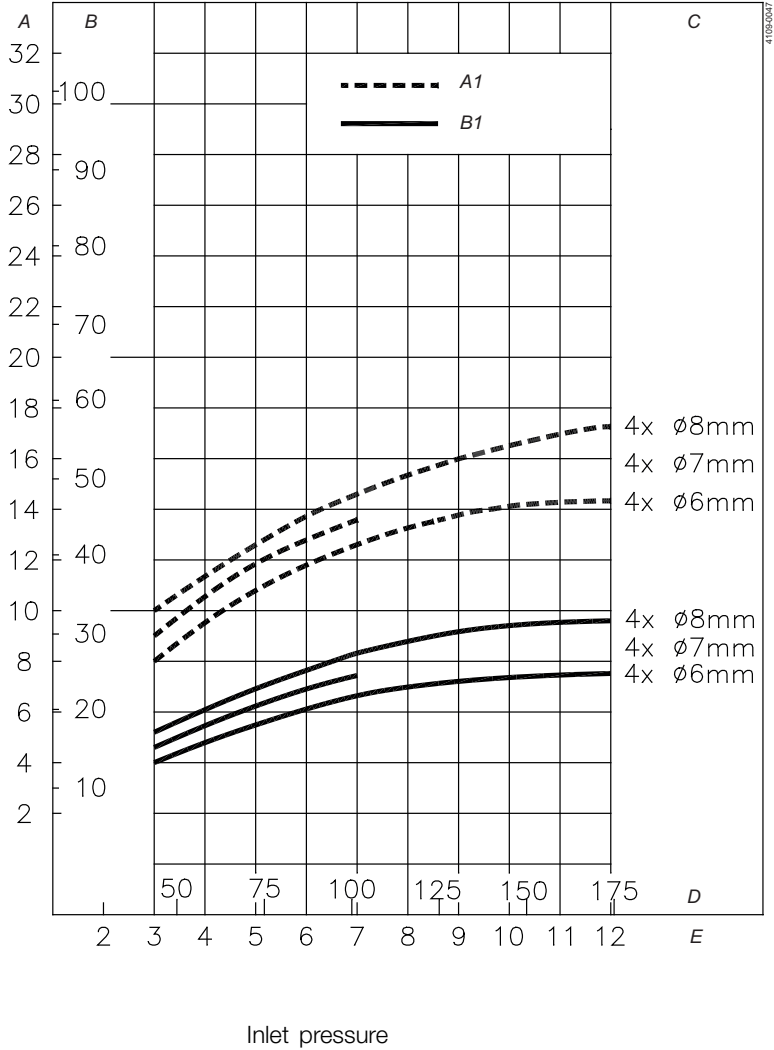


A: m	B: ft	C: nozzle sizes	D: psi	E: bar	A1: Max. static	B1: Effective
------	-------	-----------------	--------	--------	-----------------	---------------

8 Technical data

MJ40

Cleaning Time, f. complete Pattern (=8 cycles)

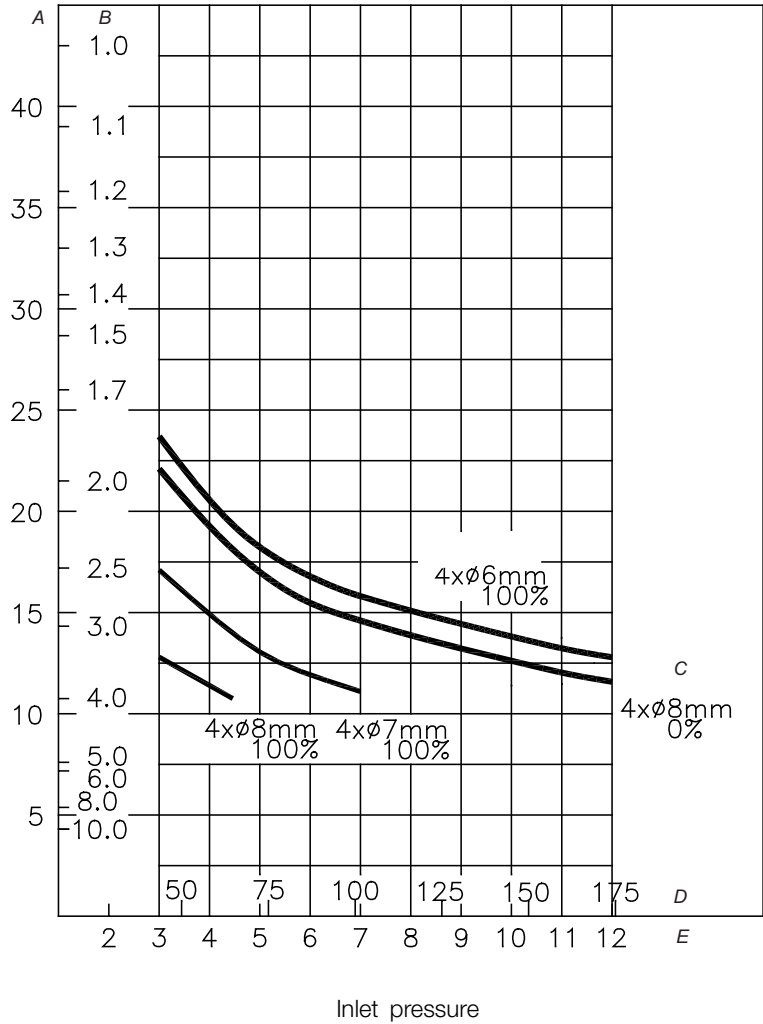

A: min.	B: RPM of machine body	C: nozzle sizes	D: psi	E: bar
---------	------------------------	-----------------	--------	--------

MJ40

9.1 Standard Configurations

Standard Configurations for Toftejorg MultiJet 40 - 2 nozzles

Connection	Guide	Nozzles (mm) (½" thread conn.)	Article number
Top Cone: 1½" BSP, Female 2 nozzles	50%	2 x ø7	TE21M202
	100%	2 x ø7	TE21M210
		2 x ø8	TE21M212
		2 x ø9	TE21M228
	0%	2 x ø10	TE21M230
Top Cone: 1½" NPT, Female 2 nozzles	50%	2 x ø7	TE21M102
	100%	2 x ø7	TE21M110
		2 x ø8	TE21M112
		2 x ø9	TE21M128
	0%	2 x ø10	TE21M130

Standard Configurations for Toftejorg MultiJet 40 - 4 nozzles

Connection	Guide	Nozzles (mm) (½" thread conn.)	Article number
Top Cone: 1½" BSP, Female 4 nozzles	100%	4 x ø6	TE21M018
		4 x ø7	TE21M020
		4 x ø8	TE21M022
	0%	4 x ø8	TE21M026
Top Cone: 1½" NPT, Female 4 nozzles	100%	4 x ø6	TE21M008
		4 x ø7	TE21M010
		4 x ø8	TE21M012
	0%	4 x ø8	TE21M016

The machine is equipped with a clutch in the hub, which gives the possibility of rotation by hand the nozzles, when the machine is to be lifted out through a tank opening.

9.2 Available add-ons


ATEX, category 1 for installation in zone 0/20 TE21MXXX70 ATEX.

Explanation to Add-ons
ATEX, category 1 for installation in zone 0/20 in accordance with Directive 2014/34/EU

10 Parts Lists and Drawings, Service Kits and Tools

MJ40

10.1 Alfa Laval MultiJet 40 with 2 nozzles

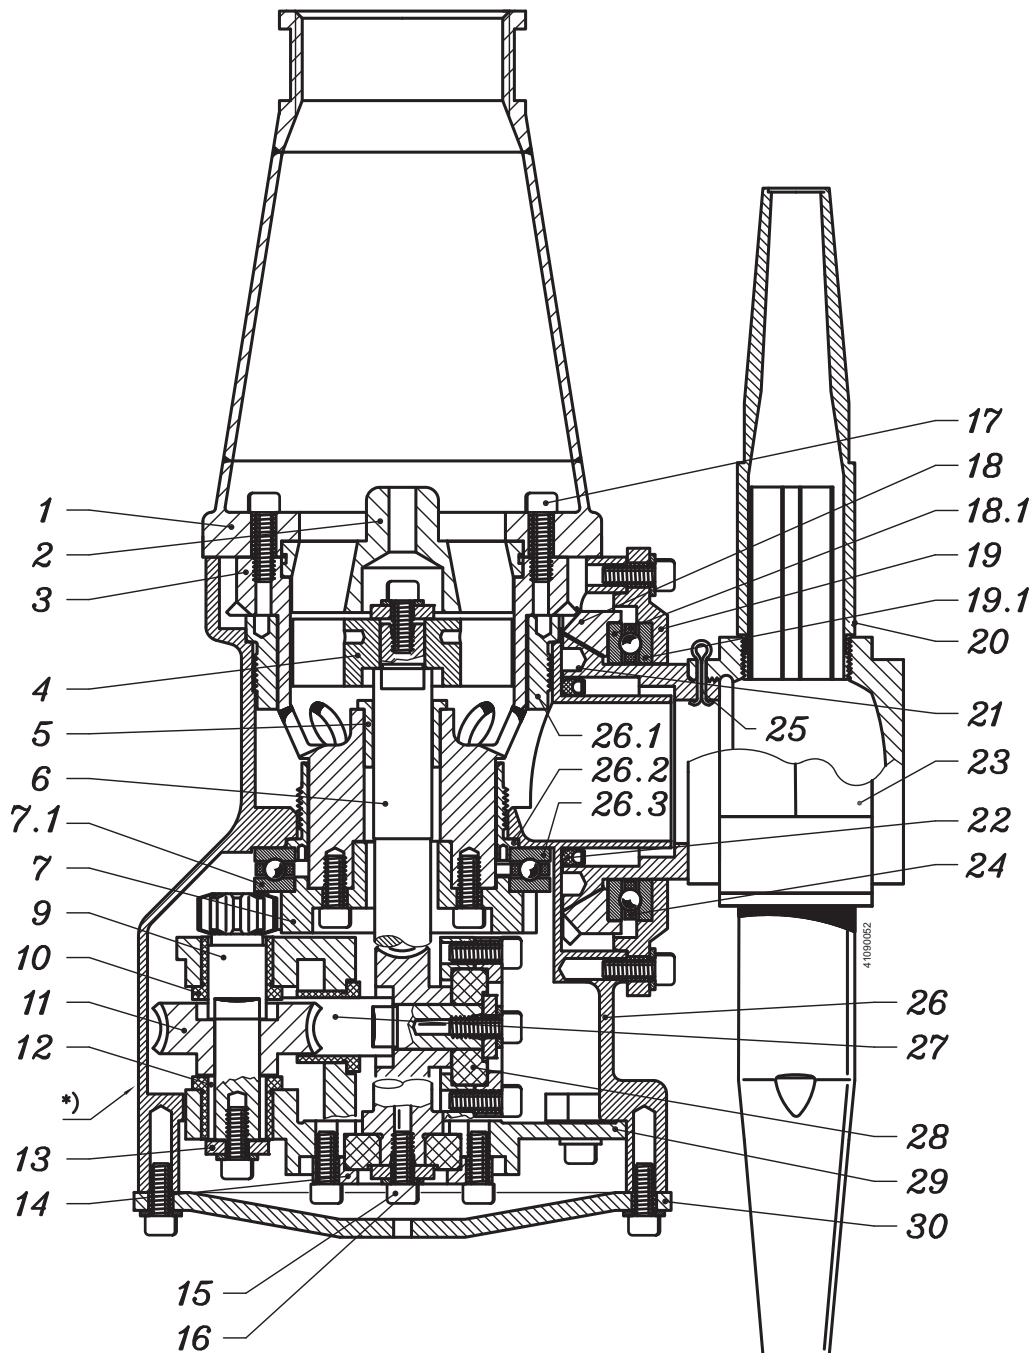

10 Parts Lists and Drawings, Service Kits and Tools

MJ40

Parts list

Pos.		Qty	Denomination
1	□	1	Top Cone
2	□	1	Guide ring
3		1	Stem
4	□	1	Impeller
5	◆○	1	Main bush
6	○	1	Turbine shaft
7		1	Gear wheel w. ball race
7.1	○	1	Ball race
9		1	Pinion
10	◆○	3	Collar bush
11	◆○	1	Worm wheel w. reinforcem.
12		1	Journal
13		4	Washer
14		2	Bearing cover
15		32	Screw
16		18	Spring washer
17		6	Screw
18		1	Bevel gear w. ball race
18.1	○	1	Ball race
19		1	Hub cover w. ball race
19.1	○	1	Ball race
20	□	2	Nozzle
21		1	Hub conical part
22	◆○	1	Lip seal
23		1	Hub nozzle part
24	○	2	Ball retainer w. balls
25	○	1	Cotter pin
26		1	Body
26.1	○	1	Main collar upper
26.2	○	1	Main collar lower
26.3	○	1	Ball race
27	○	1	Horizontal shaft
28	◆○	2	Slide bearing
29		1	Gear frame
30		1	Bottom cover, compl.
33	◆○	1	Worm wheel w. reinforcem.

Service kits

Denomination

Spare part kit

- ◆ Minor service kit TE55H000
- Major service kit TE55H010

*Note: Pos. 26 is not sold as single spare part component. Only sold as part of a machine maintenance/repair order. For further information please contact Alfa Laval Customer Support.

Configuration according to delivery note/order.


Parts marked with ◆ are included in the Minor service kit TE55H000

Parts marked with ○ are included in the Major service kit TE55H010

10 Parts Lists and Drawings, Service Kits and Tools

MJ40

10.2 Alfa Laval MultiJet 40 with 4 nozzles

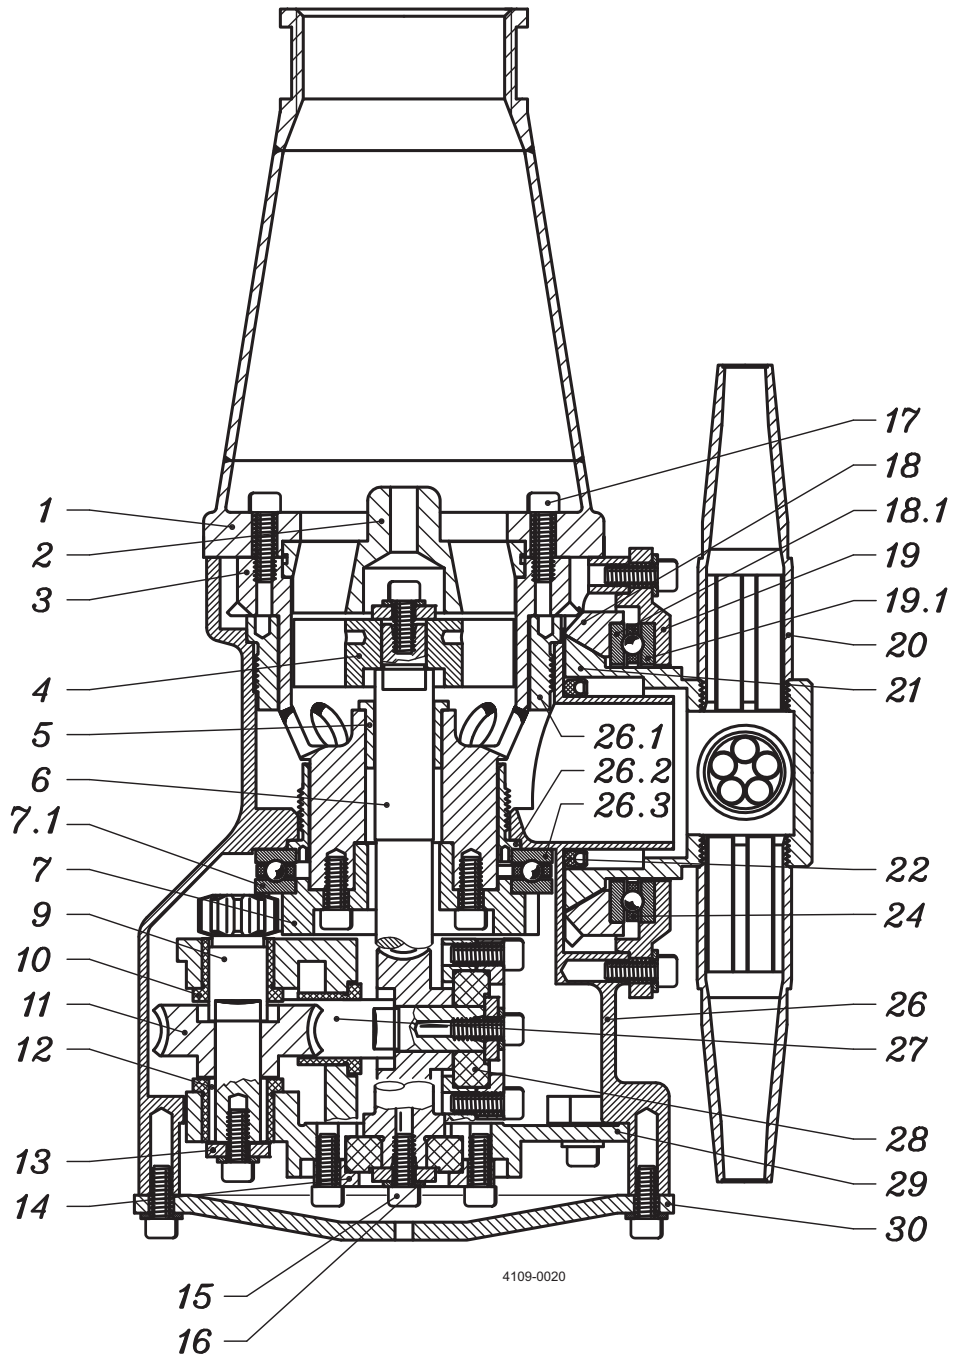

10 Parts Lists and Drawings, Service Kits and Tools

MJ40

Parts list

Pos.		Qty	Denomination
1	□	1	Top Cone
2	□	1	Guide
3		1	Stem
4		1	Impeller
5	◆○	1	Main bush
6	○	1	Turbine shaft
7		1	Gear wheel w. ball race
7.1	○	1	Ball race
9		1	Pinion
10	◆○	3	Collar bush
11	◆○	1	Worm wheel w. reinforcem.
12		1	Journal
13		4	Washer
14		2	Bearing cover
15		32	Screw
16		18	Spring washer
17		6	Screw
18		1	Bevel gear w. ball race
18.1	○	1	Ball race
19		1	Hub cover w. ball race
19.1	○	1	Ball race
20	□	4	Nozzle
21		1	Hub
22	◆○	1	Lip seal
24	○	2	Ball retainer w. balls
26		1	Body
26.1	○	1	Main collar upper
26.2	○	1	Main collar lower
26.3	○	1	Ball race
27	○	1	Horizontal shaft
28	◆○	2	Slide bearing
29		1	Gear frame
30		1	Bottom cover, compl.
33	◆○	1	Worm wheel w. reinforcem.

Service kits

Denomination

Spare part kit

- ◆ Minor service kit TE55H000
- Major service kit TE55H010

*Note: Pos. 26 is not sold as single spare part component. Only sold as part of a machine maintenance/repair order. For further information please contact Alfa Laval Customer Support.

Configuration according to delivery note/order.

Parts marked with ◆ are included in the Minor service kit TE55H000


Parts marked with ○ are included in the Major service kit TE55H010

10 Parts Lists and Drawings, Service Kits and Tools

MJ40

10.3 Service kits and service intervals

Service Intervals

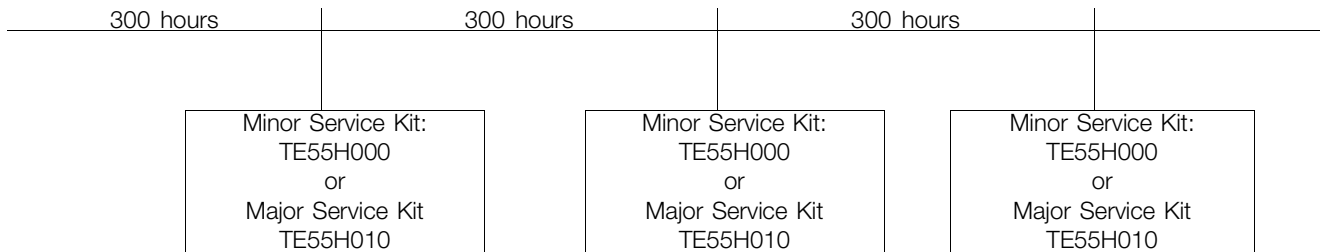

Service Kit Minor for Toftejorg MultiJet 40 Article No. TE55H000

Pos.	Qty.	Denomination	Item no.
5	1	Main bush	TE21A525
10	3	Collar bush	TE21A585
11	1	Worm wheel w. reinforcement	TE21A367
33	1	Worm wheel w. reinforcement	TE21A367
22	1	Lip seal	TE21B549
28	2	Slide bearing	TE21A570
	3	Locking wire ^{*)}	TE651

^{*)} Locking wire not used for MultiJet 40

Service Kit Major for Toftejorg MultiJet 40 Article No. TE55H010

Pos.	Qty.	Denomination	Item no.
6	1	Turbine shaft	TE411K
7.1	1	Ball race	TE8261
18.1	1	Ball race	TE8261
19.1	1	Ball race	TE8261
26.3	1	Ball race	TE8261
24	2	Ball retainer w. balls	TE21A380
25	1	Split pin ^{**)}	TE448
26.1	1	Main collar upper	TE21B520
26.2	1	Main collar lower	TE21B521
27	1	Horizontal shaft	TE828Z
	1	Service Kit Minor	TE55H000

^{**)} Only used with 2 nozzle hub

10 Parts Lists and Drawings, Service Kits and Tools

MJ40

10.4 Tools

Standard Tool kit for Toftejorg MultiJet 40, article number TE81B055


Denomination	Qty/Tool number
Hex Key for Screw	1 x TE134
Hex Screwdriver for Screw	2 x TE134A
Socket wrench for Hex Screw	1 x TE462A

Available on request:



Pusher for Collar bush, 1½"	1 x TE81B033
-----------------------------	--------------

Sketch of tools for replacement of Collars bush:

TE81B033: Pusher for Collar bush

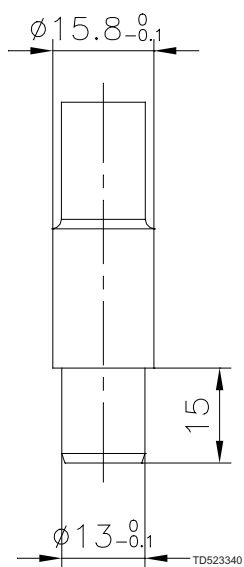

Sketch of tools for replacement of Main collars:

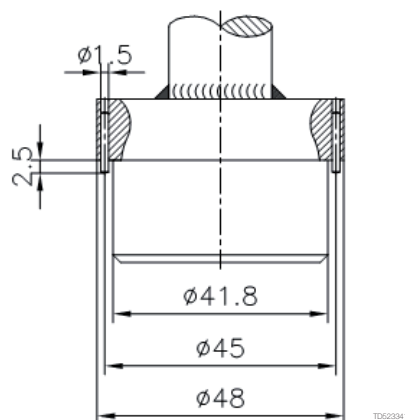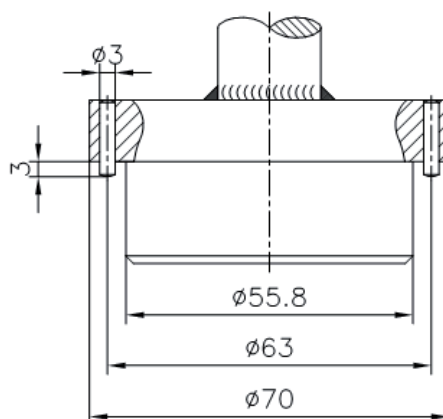

11 General Information

MJ40

11.1 Service and Repair

Upon every return of a product, no matter if for modifications or repair, it is necessary to contact your local Alfa Laval office to guarantee a quick execution of your request.

You will receive instructions regarding the return procedure from your local Alfa Laval office. Be sure to follow the instructions closely.

11.2 How to Order Spare Parts

On the Cross Sectional Drawing as well as on all instruction drawings, the individual parts have a position number, which is the same on all drawings. From the position number, the part is easily identified in the Reference Lists of Parts, page 42 ff.

Individual parts should always be ordered from the Reference Lists of Parts, page 42 ff. Reference number and description should be clearly stated.

Please refer to the Spare Part Manual for Alfa Laval Toftebjerg MultiJet 40, EPS00158, for information on item numbers. The Spare Part manual is available from the on-line Alfa Laval Product catalogue Anytime or the Close at hand spare part catalogue.

Please also quote the type of machine and serial number. This will help us to help you. The type and serial numbers are stamped on the Body of the tank cleaning machine.

11.3 How to contact Alfa Laval Kolding A/S

For further information please feel free to contact:

Alfa Laval Kolding A/S

31, Albuen - DK 6000 Kolding - Denmark

Registration number: 30938011

Tel switchboard: +45 79 32 22 00 - Fax switchboard: +45 79 32 25 80

www.toftebjerg.com, www.alfalaval.dk - info.dk@alfalaval.com

Contact details for all countries are continually updated on our websites

How to contact Alfa Laval

Contact details for all countries are continually updated on our website.

Please visit www.alfalaval.com to access the information directly.

© Alfa Laval Corporate AB

This document and its contents is owned by Alfa Laval Corporate AB and protected by laws governing intellectual property and thereto related rights. It is the responsibility of the user of this document to comply with all applicable intellectual property laws. Without limiting any rights related to this document, no part of this document may be copied, reproduced or transmitted in any form or by any means (electronic, mechanical, photocopying, recording, or otherwise), or for any purpose, without the expressed permission of Alfa Laval Corporate AB. Alfa Laval Corporate AB will enforce its rights related to this document to the fullest extent of the law, including the seeking of criminal prosecution.